Operation Guide for Optional Products


Thank you for purchasing a CCS product. To ensure proper use of the product, please read this Operation guide before use and keep it for your future reference.



These products are designed exclusively for CCS LED illuminations. Do not mount them to other products. Please use them correctly confirming that they are the appropriate model. The products may be deformed or discolored by heat depending on the operating environment. Take proper heat dissipation measures and other measures to ensure that the products will not be in temperature that exceed their heat resistance.

Model Numbers


You may confirm applicable models (lenses and lights) by checking the model numbers.

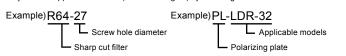

Filter

Sharp Cut Filters

Prevents external stray light. Mounted on front lens thread to block light less than 640 nm and transmit approximately. 85% of light with a longer wavelength. This filter blocks ambient light for better

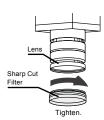

R60 Series


Model	R60-C	R60-16	R60-25	R60-27	R60-30	R60-40	R60-46
Size	For	M16.0	M25.5	M27.0	M30.5	M40.5	M46.0
Size	C-mount	P0.5	P0.5	P0.5	P0.5	P0.5	P0.75

R64 Series

1104 Series							
Model	R64-C	R64-16	R64-25	R64-27	R64-30	R64-40	R64-46
Size	For	M16.0	M25.5	M27.0	M30.5	M40.5	M46.0
Size	C-mount	P0.5	P0.5	P0.5	P0.5	P0.5	P0.75

Blue-Light Filters

Blocks ambient light out of blue wavelength range. Mounted on front lens thread to transmit approximately 47% of in a wavelength band centered on 440 nm in the wavelength range from 350 to 520 nm

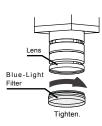

V44 Series


Model	V44-C	V44-25	V44-27	V44-30	V44-40	V44-46
Cimo	For	M25.5	M27.0	M30.5	M40.5	M46.0
Size	C-mount	P0.5	P0.5	P0.5	P0.5	P0.75

Polarizing Filters

Prevents glare from the light. Mounted on front lens. Works with a polarizing plate to eliminate glare from the light.

Pl Series

		_								
Mode	el	PL-25	PL-25-NL	PL-27	PL-27-NL	PL-30	PL-30-NL	PL-40	PL-40-NL	PL-46
		M25.5	M25.5	M27.0	M27.0	M30.5	M30.5	M40.5	M40.5	M46.0
Size		P0.5	P0.5 (With lock)	P0.75						

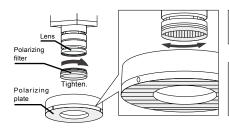

Turn and adjust the polarizing glare while checking the image.

When the polarization direction of the filter is 90° (a right angle), the regular reflection components of the light are filtered out and the effect appears.

How to Use

A polarizing filter and polarizing plate are used in combination. When the polarization direction of the light side and the polarization direction of the camera side differ by 90° (a right angle), regular reflection components of the light are filtered out.

- 1. Place the polarizing plate on the emitter of the light.
- 2. Place the polarizing filter on the end of the camera lens.
- 3. Rotate the polarizing filter until the polarization direction is 90° (a right angle) from the polarization direction of the polarizing plate.

Polarizing Plate

Prevents glare from the light. Attaches to lights. Works in combination with the polarizing filter to prevent glare.


	Ring Lights	Bar Lights		Coaxial Lights	
	PL-LDR-32	PL-LDL-34X8	PL-LDQ-78	PL-LFV2-35	
	PL-LDR-42	PL-LDL-42X15	PL-LDQ-100*	PL-LFV2-50	
	PL-LDR-50	PL-LDL-74X27	PL-LDQ-150	PL-LFV2-70	
Model	PL-LDR2-70	PL-LDL-82X15	PL-LDQ-200	PL-LFV2-100	
	PL-LDR-90	PL-LDL-130X15*		PL-LFV2-130	
	PL-LDR-120-40	PL-LDL-180X16*		PL-LFV2-200	
	PL-SQR-56	PL-LDL-247X16*			
Transmissivity	30%			43%	
Allowable temperature limit	60°C				

Note: The polarizing plate indicated with asterisk(*) comes with a protect plate (transparent acrylic plate) for attaching PL-LDR2-70 incudes a Light adapter ring.

Polarizing plates are wear and tear items. Replace them periodically. If the polarizing plates are discolored or deformed upor inspection, replace them with brand new polarizing plates. It is recommended that you keep some extra polarizing plates.

How to Mount

LDR2/LDR Series (Ring Lights)

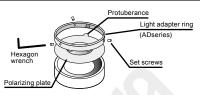

Applicable models				
LDR2-32	LDR-32			
LDR2-42	LDR-42			
LDR2-50	LDR-50B			
LDR2-70	LDR-70A			
LDR2-90	LDR-90B			
LDR2-120	LDR-120B			


Press down with the light adapter ring and attach with the set screws using a hexagon wrench

LDL Series (Bar Lights)



Applicable models					
LDL-34X8 LDL-82X15					
LDL-42X15	LDL-247X16				
LDL-74X27					
	LDL-34X8 LDL-42X15				

Use the attached mounting screws. (Only the LDL-247X16 is attached with a protect plate.)

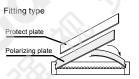

Applicabl	e models
LDL-130X15	LDL-180X16

Insert the protect plate and polarizing plate together into the slot.

LDQ Series (Bar Lights)




LDQ-78 LDQ-150A LDQ-100A LDQ-200A

Attach the polarizing plates with the attached screws to the LDQ-78, LDQ-100A, and LDQ-150A

The LDQ-200A is attached with protect plates. Insert the protect plates and polarizing plates in pairs into the slots.

Polarizing plate Attach the pairs of polarizing plates satisfying conditions (1) and (4).

The four polarizing plates are classified into two pairs of different types. Attach one of the pairs horizontally (1)

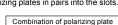

(2)


to the upper side and lower side, and the other pair vertically on the left-hand side and right-hand side.



Piled up crosswise Note: These plates can be attached with no front/back or up/ down directional restrictions.

Up in parallel (Blackened) (Clear)


LFV2 Series (Coaxial Lights)

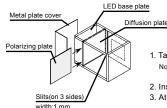

Applicabl	e models
LFV2-35	LFV2-100
LFV2-50	LFV2-130
LFV2-70	LFV2-200

- 1. Take off a metal plate cover on the dimming side. Note: Be careful not to slip off a LED plate and a diffusion plate.
- 2. Insert a polarizing plate into the slits
- 3. Attach a metal plate cover as it used to be.

SQR Series (Ring Lights)

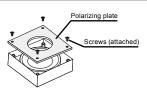

Applicable models SQR-56

Use the attached mounting screws.

Diffusion Plate


Prevents shine and glare. Attaches to lights to reduce shine from glossy applications.

	Ring Lights		Bar Lights
	DF-LDR-32	PL-LDR-48LA	DF-LDL-34X8(Usable with the LDQ-78)
	DF-LDR-42	PL-LDR-74LA	DF-LDL-42X15(Usable with the LDQ-100A)
	DF-LDR-50	PL-LDR-100LA	DF-LDL-74X27
Model	DF-LDR2-70	PL-LDR2-132LA	DF-LDL-82X15(Usable with the LDQ-150A)
	DF-LDR-90	PL-LDR-170LA	DF-LDL-130X15(Usable with the LDQ-200A)
	DF-LDR-120-40	PL-LDR-120-208LA	DF-LDL-180X16
	DF-SQR-56		DF-LDL-247X16
Allowable temperature limit	80°C		

There are a front and a back of a diffusion plate. Attach it with the smooth side facing to the LED lights.

How to Mount


LDR2/LDR Series (Ring Lights)

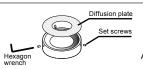

Applicable models				
LDR-70A				

Attach the set screws with a hexagon wrench.


Light adapter ring attachment type

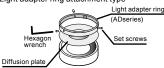

Applicable models				
LDR2-32	LDR-32			
LDR2-42	LDR-42			
LDR2-50	LDR-50B			
LDR2-90	LDR-90B			
LDR2-120	LDR-120B			

Press down with the light adapter ring and attach with the set screws using a hexagon wrench.

LDL Series (Bar Lights)

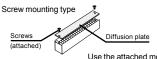

Use the attached mounting screws



ision piate	
Bend a diffusion plate backward	and
insert the diffusion plate into the s	ilot.

Applicable models		
LDL-34X8 LDL-82X15		
(LDQ-78)	(LDQ-150A)	
LDL-42X15	LDL-247X16	
(LDQ-100A)	LDL-24/X16	
LDL-74X27		

Applicable models		
LDL-130X15 (LDQ-200A)	LDL-180X16	
(LDQ-200A)		


LDR2-LA Series (Low-Angle Ring Lights)



Applicable models		
LDR2-48-LA LDR2-132-LA		
LDR2-74-LA	LA LDR2-170-LA	
LDR2-100-LA LDR2-208-LA		

Attach the set screws with a hexagon wrench.

SQR Series (Ring Lights)

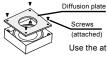

SQR-56	

Use the attached mounting screws


Light Control Film

Attaches to lights to converts diffused light into parallel light.

	Flat Lights		Coaxial Lights	
	LC-LDL-TP-27×27	LC-LFL-100	LC-LFV2-35	LC-LFV-50
	LC-LDL-TP-43×35	LC-LFL-180	LC-LFV2-50	LC-LFV-70
	LC-LDL-TP-51×51	LC-LFL-200	LC-LFV2-70	LC-LFV-100
Model	LC-LDL-TP-63×60		LC-LFV2-100	LC-LFV-130
	LC-LDL-TP-83×75		LC-LFV2-130	LC-LFV-200
	LC-LDL-TP-100×100		LC-LFV2-200	
Transmissivity	67%	*	*	
Allowable temperature limit	120°C			

How to Mount


LFL/LDL/LDL-TP Series (Flat Lights)

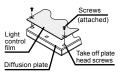

- 1. Put a light control film on a diffusion plate. Be sure of the direction to attach it.
- 2. Take off the plate screws with which a diffusion plate is attached.
- 3. Screw a diffusion plate and a light control film together with the

Applicable models		
LDL-TP-27X27 LDL-100X100		
LDL-TP-43X35	LFL-100	
LDL-TP-51X51	LFL-180	
LDL-TP-63X60	LFL-200	
LDL-TP-83X75		
LDL-TP-100X100		

LFV/LFV2 Series (Coaxial Lights)

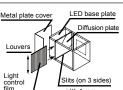

- LED base plate 1. Take off a metal plate cover on the dimming side.

 Note: Be careful not to slip off a LED plate and a diffusion plate.
 - 2. Insert a light control film into the slits. Be sure of the direction of louvers.
 - 3. Attach a metal plate cover as it used to be.

٠	Applicable models		
	LFV2-35	LFV-50A	
	LFV2-50	LFV-70	
	LFV2-70	LFV-100A	
	LFV2-100	LFV-130	
	LFV2-130	LFV-200C	
t	LFV2-200		

Adapter

Light Adapter Rings (AD Series)

Used to attach diffusion plates and polarizing filters to different lights.


		. 9	Light adapter ring
Mo	del		
AD-LDR-32	AD-LDR-90		Set screws
AD-LDR-42	AD-LDR-120	Hexagon	(attached)
AD-LDR-50		wrench (attached)	
			Diffusion plate
			Polarizing plate

Applicable models		
LDR2-32	LDR-32	
LDR2-42	LDR-42	
LDR2-50	LDR-50B	
LDR2-90	LDR-90B	
LDR2-120	LDR-120B	

Lens Attachment Rings (MR Series)

Attach a light directly to the filter screw section of the lens. Ideal for cramped installation locations.

Model	Si	ze	
MR-LDR-32-M25	M25.5	P0.5	1
MR-LDR-32-M27	M27.0	P0.5	1
MR-LDR-32-M30	M30.5	P0.5	Le
MR-LDR-50-M25	M25.5	P0.5	-
MR-LDR-50-M27	M27.0	P0.5	
MR-LDR-50-M30	M30.5	P0.5	

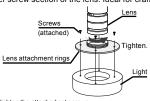

Applicab	le models		
LDR2-32 LDR-32			
LDR2-50	LDR-50B		

- 1. Mount the lens attachment ring to the lens opening.
- 2. Mount the lens attachment
- rings to the light.

MR-LDR-32: Use a hexagon wrench to tighten the attached set screws MR-LDR-50: Use the attached mounting screws.

Warranty Information

EXCEPT FOR THE EXPRESS WARRANTIES STATED IN THIS DOCUMENT, CCS MAKES NO ADDITIONAL WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY AS TO ANY MATTER WHATSOEVER. IN PARTICULAR, ANY AND ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED EXCEPT AS EXPRESSLY SET FORTH HEREIN, COS MAKES NO WARRANTIES WITH RESPECT TO THE PRODUCTS. WARRANTY PERIOD: TWO YEARS STATTING FROM COS IN. S

CCS Inc. WILL REPAIR OR REPLACE THE PRODUCT FREE OF CHARGE IF IT SHOULD FAIL TO FUNCTION WITHIN THE SPECIFIED WARRANTY PERIOD. IF EITHER OF THESE CONDITIONS OCCURS, PLEASE TAKE THE PRODUCT TO YOUR CCS SALES REPRESENTATIVE.

1 CCS Inc. WILL REPAIR OR REPLACE THE PRODUCT FREE OF CHARGE IF IT SHOULD FAIL TO FUNCTION UNDER USE ON OUR SPECIFIED CONDITION IN ACCORDANCE WITH THE INSTRUCTION GUIDE AND OTHER WRITTEN CAUTIONS DURING THE INDICATED WARRANTY PERIOD OF TWO YEARS.

- 2 CCS Inc. WILL CHARGE A REPAIR FEE UNDER THE FOLLOWING CONDITIONS: 1) IF THE PRODUCT HAS BEEN SUBJECTED TO MISUSE, UNAUTHORIZED REPAIRS, OR MODIFICATION FROM ITS ORIGINAL DESIGN.
- 2) IF THE PRODUCT HAS BEEN DAMAGED FROM IMPACTS DUE TO INAPPROPRIATE HANDLING
- 3) IF DAMAGE TO THE PRODUCT RESULTS FROM EXTERNAL CAUSES INCLUDING ACCIDENTS, FIRE, POLLUTION, RIOTS, COMMUNICATION FAILURES, EARTHQUAKES, THUNDERSTORMS, WIND AND FLOOD DAMAGE, OR ANY OTHER ACT OF PROVIDENCE, OR FROM ANY EXTRAORDINARY CONDITIONS SUCH AS ELECTRICAL SURGES, WATER LEAKAGE, CONDENSATION, OR THE USE OF CHEMICALS 4) IF THE DAMAGE RESULTS FROM CONNECTION TO ANY POWER SUPPLY OR TO ANY EQUIPMENT WHICH CCS Inc. DOES NOT
- MANUFACTURE OR DOES NOT SPECIFY FOR USE.
- 3 CCS ASSUMES NO LIABILITY FOR ANY PURCHASER'S SECONDARY DAMAGE (DAMAGE OF EQUIPMENT, LOSS OF OPPORTUNITIES LOSS OF PROFITS, ETC.) OR ANY OTHER DAMAGE RESULTING FROM A FAILURE OF OUR PRODUCT.

THIS WARRANTY INFORMATION PROVIDES THE SCOPE OF CCS'S PRODUCT WARRANTY WITHIN THE SPECIFIED PERIOD, AND DOES NOT INDICATE OR IMPLY ANY FURTHER GUARANTEE BEYOND THE WARRANTY TERMS.

- CONTACT CCS FOR INQUIRIES OR INFORMATION ON REPAIRS TO THE PRODUCT AFTER THE EXPIRATION OF THE WARRANTY
- Contents of this Instruction Guide may be changed without prior notice.
 Illustrations used in this Instruction Guide may differ from actual products.
 CCS maintains the copyright on this Instruction Guide. Unauthorized transfer or reproduction is strictly prohibited.



http://www.ccs-grp.com/