

# GETTING STARTED

# Ladybug5+

## Will your system support the camera?

Recommended system configuration

- **OS**—Windows 10 64-bit or Ubuntu 20.04 64-bit for capture, recording, and post processing
- **CPU**—11th Gen Intel® Core™ i7 processor
- **RAM**—8 GB for capture and recording / 16 GB for post processing
- **Software**—Microsoft Visual Studio 2015 or newer / g++ 9.3.0 or newer

## Do you have a downloads account?

A downloads account is required to download software and firmware.

1. Go to [www.flir.com/account](http://www.flir.com/account).
2. Enter your email address and click Continue.
3. Complete the Create an account form and click Continue.
4. You will receive an email with a link to activate your account.
5. Once activated, you can login using the credentials you've created.

The [Teledyne FLIR Spherical Imaging](#) section of our website has many resources to help you operate your camera effectively, including:

- Ladybug® SDK software
- Firmware updates and release notes
- Dimensional drawings and CAD models
- Documentation
- Accessories

## Do you have all the parts you need?

To install your camera you need the following components:

- Cable—USB3 cable
- GPIO Cable—12-pin Hirose GPIO cable
- Power supply—24 V 2.5 A (60 W) power supply
- Interface card—USB 3.1 Gen 1 Host Controller Card compliant with SuperSpeed USB and xHCI specifications.
- Desktop mount (optional) or tripod adapter (optional)

Teledyne FLIR sells all parts required for installation. To purchase, visit our [Spherical Imaging page](#).

A Development Kit of components is available for the Ladybug5+.

## Camera Care

**Warning!** Do not open the camera housing. Doing so voids the Hardware Warranty.

Your camera is a precisely manufactured device and should be handled with care. Here are some tips on how to care for the device.

- Avoid electrostatic charging.
- When handling the camera unit, avoid touching the lenses. Fingerprints affect the quality of the image produced by the device.
- To clean the lenses, use a standard camera lens cleaning kit or a clean dry cotton cloth. Do not apply excessive force.
- Avoid excessive shaking, dropping or any kind of mishandling of the device.

**Note:** To replace the protective glass the camera must be returned to Teledyne for servicing. Contact [Support](#) for more details.

## Contacting Us

For any questions, concerns or comments please contact us:

<a href="#">Sales Information</a>	<a href="#">General questions</a>
<a href="#">Support Ticket</a>	<a href="#">Technical support</a>
<a href="#">Website</a>	Find specifications, support articles, downloads in the <a href="#">Spherical Imaging</a> section of the website


## For More Information

Once installed the Ladybug SDK help and other technical references can be found in: **Program Files→Teledyne→Ladybug→Doc**

For more information about...	See...
<a href="#">Your camera's settings and capabilities</a>	Technical Reference
<a href="#">Using the LadybugCapPro program</a>	SDK Help
<a href="#">Best Practices for Ladybug</a>	<a href="#">Best Practices TAN</a>
<a href="#">Using Ladybug in a Mobile Setting</a>	<a href="#">Mobile Setting TAN</a>

## Installing Your Interface Card and Software

### 1. Install your Interface Card

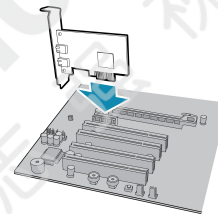

Ensure the card is installed per the manufacturer's instructions.

Alternatively, use your PC's built-in host controller, if equipped.

Open the Windows Device Manager. Ensure the card is properly installed under **Universal Serial Bus Controllers**. An exclamation point (!) next to the card indicates the driver has not yet been installed.

### 2. Install the Ladybug® Software

**Note:** For existing users who already have Ladybug software installed, we recommend ensuring you have the latest version for optimal performance of your camera.


- Go to the [Ladybug SDK](#) page.
- Click the Download button. You are prompted to login, if not already.
- Select your OS.
- Click the version to download.

After the download is complete, the Ladybug setup wizard begins. If the wizard does not start automatically, double-click the .exe file to open it. Follow the steps in each setup dialog.

## Installing Your Ladybug5+

### 1. Install a mounting bracket (optional)

#### a. Install a Tripod Adapter.

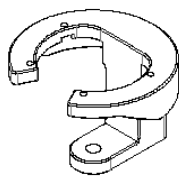

The tripod adapter attaches to the bottom of the camera.

**Note:** the tripod adapter uses a 3/8" mounting hole which requires an adapter to fit a standard tripod.


**The tripod adapter is not used if using a desktop mount.**

#### b. Install a Desktop Mount.

Thread the cables through the desktop mount and out the cable exit slot. Connect the cables as per steps 2 and 4 before attaching the mount to the camera.

**The desktop mount is not used if using a tripod adapter.**

### 2. Connect the USB3 interface cable to the Ladybug5+

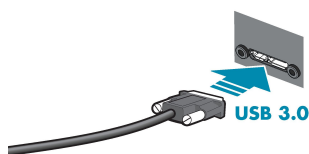


Plug the USB3 cable into the camera and secure with the cable jack screws. Using jack screws ensures a reliable connection and the pressure of the seal helps to keep moisture out of the camera.

### 3. Connect the Ladybug5+ to the interface card

Plug the USB3 cable into the host controller or hub.

### 4. Connect the GPIO wiring harness to the Ladybug5+



Plug the 12-pin GPIO cable into the camera and half turn to lock. Securing the GPIO ensures a reliable connection and helps to keep moisture out of the camera. The wiring harness must be compatible with a Hirose 12-pin female GPIO connector.

GPIO is used for external trigger input, strobe output, power, and PPS.

### 5. Confirm successful installation

Open LadybugCapPro:

**Start menu → Teledyne Ladybug SDK → LadybugCapPro**

- The Welcome dialog opens, and it will display a choice of starting a camera, or loading a previously recorded stream file. Select Start Camera.
- The Select Camera dialog opens. This dialog allows you to view a list of all the currently connected Ladybug cameras, and select one to control.
- Ensure the camera is identified as USB3. If the camera is identified as USB2 it could indicate a bad cable connection or incorrect driver and the camera will not function properly.
- To begin grabbing images, select a camera and click OK.


## USB 3.1 Connector

The camera is equipped with a USB 3.1 Micro-B connector that is used for data transmission and camera control. For more detailed information, consult the USB 3.1 specification available from <http://www.usb.org/developers/docs/>.

## General Purpose I/O Connector

The camera has an 12-pin GPIO connector on the bottom of the case; refer to the diagram for wire color-coding. The GPIO is a Hirose waterproof 12-pin female connector (Mfg P/N:LF10WBP-12SD).

### Diagram

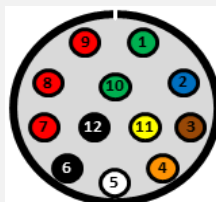

Color	Pin	Function	Description
Green	1	OPTO_GND	Ground for opto-isolated IO pins
Blue	2	IO	Opto-isolated input (default Trigger in)
Brown	3	O1	Opto-isolated output
Orange	4	IO2	Input/Output / GPS data
White	5	+3.3 V	Power external circuitry up to 150 mA
Black	6	GND	Ground for bi-directional IO, V <sub>EXT</sub> , +3.3 V pins
Red	7	V <sub>EXT</sub>	Allows the camera to be powered externally
Red	8	V <sub>EXT</sub>	Allows the camera to be powered externally
Red	9	V <sub>EXT</sub>	Allows the camera to be powered externally
Green	10	OPTO_GND	Ground for opto-isolated IO pins
Yellow	11	IO3	Input/Output / PPS signal
Black	12	GND	Ground for bi-directional IO, V <sub>EXT</sub> , +3.3 V pins

## Status Indicator LED

LED Status	Description
Off	Not receiving power
Steady green	Receiving power
Flashing/steady yellow	Initializing FPGA
Steady yellow-green	Sensor powered down or insufficient power
Steady bright green	Acquiring and transmitting images
Flashing green	Accessing camera registers (no acquisition)
Flashing green-red	Updating firmware
Flashing red	Temporary problem
Steady red	Serious problem